



Printing a Mounting Template

NOTICE

It is not recommended that you print a mounting template on your own. Use the template that came in the product box.

If you do print the template, you must follow these instructions for printing a mounting template precisely. To print large templates, you need large enough paper and printer. Failure to have the correct sized paper and printer, or a failure to follow these instructions, may result in an incorrectly sized template and therefore an incorrect cutout (too large or too small) on the mounting surface of your boat.


- 1 Select **File > Print**.



- 2 Select **None** for **Page Scaling** ①.
- 3 Ensure the check mark is next to **Auto-Rotate and Center** ②.
- 4 Drag the arrow ③ to the right, to view page 2 in the window below.
- 4 Verify that the paper size is larger than the template ④.
In this example, the paper is not larger than the template.
- 5 If the paper size is not large enough, select **Properties** ⑤ and select a **Page Size** that is larger than the template.

NOTICE

Garmin is not responsible for any damages or expenses resulting from a miscut mounting surface arising from a failure to follow these instructions.

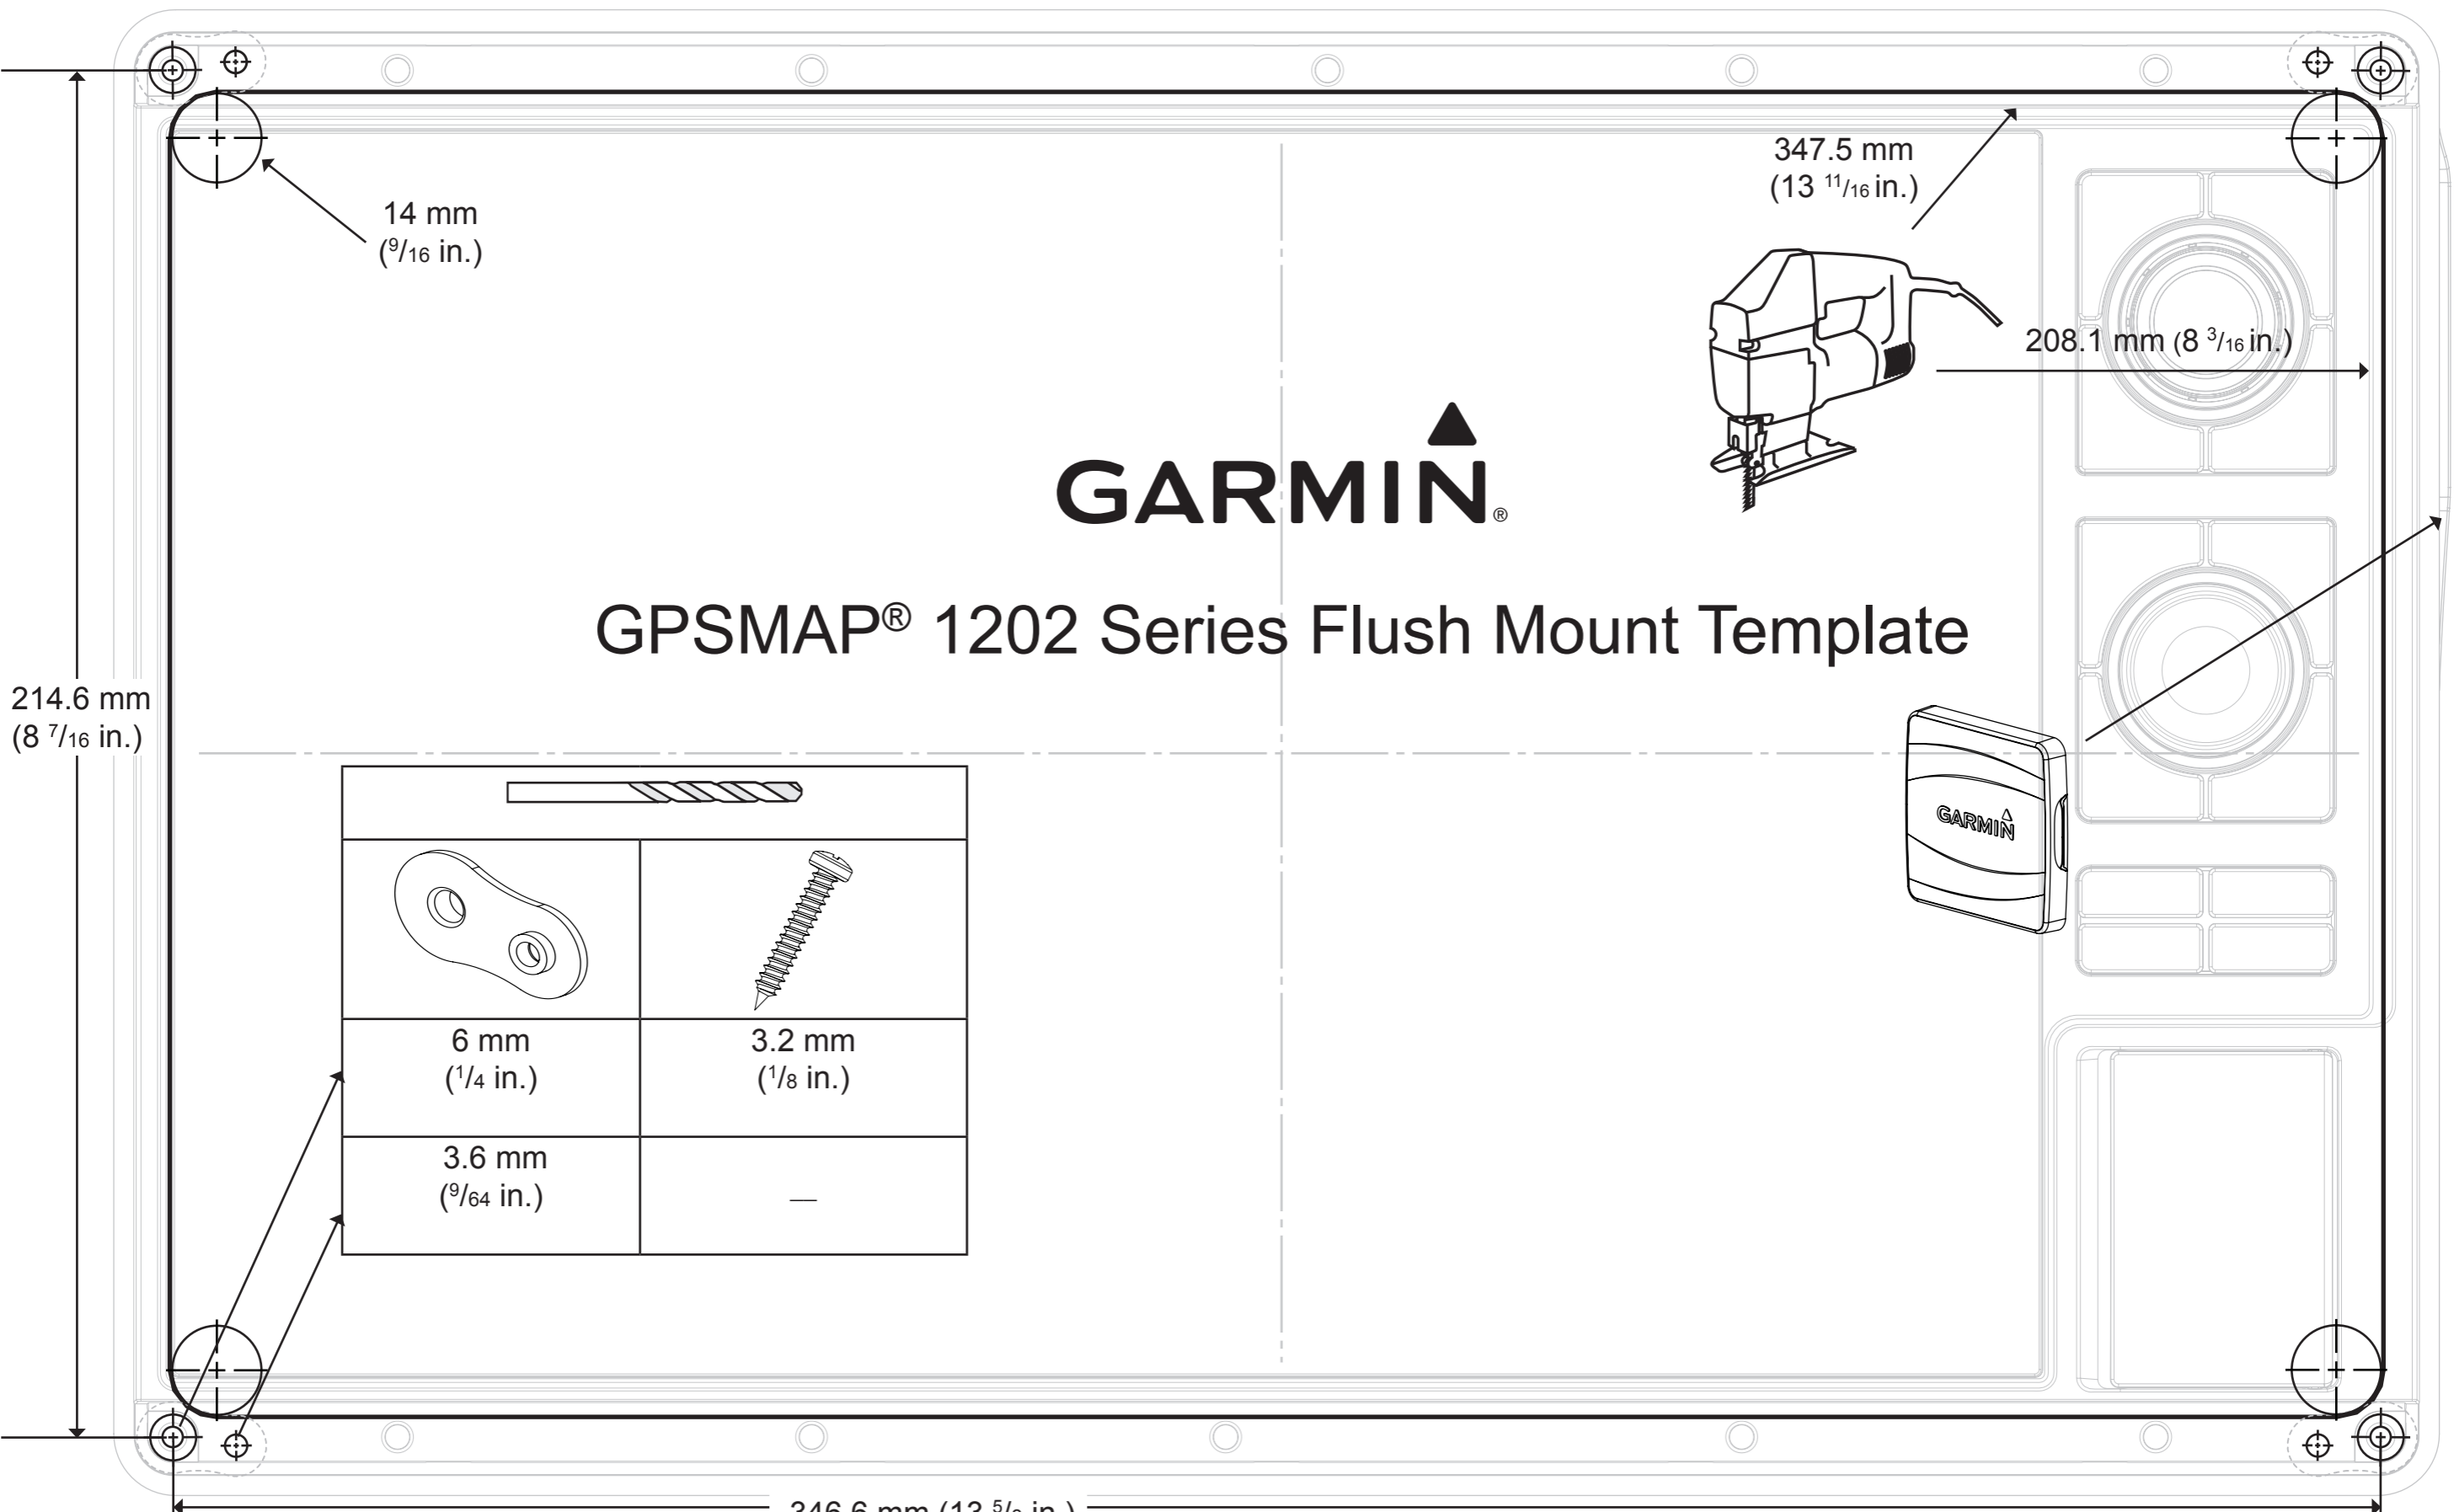

214.6 mm
(8 ⁷/₁₆ in.)

14 mm
(⁹/₁₆ in.)

347.5 mm
(13 ¹¹/₁₆ in.)

208.1 mm (8 ³/₁₆ in.)

GARMIN

GPSMAP[®] 1202 Series Flush Mount Template

6 mm (¹ / ₄ in.)	3.2 mm (¹ / ₈ in.)
3.6 mm (⁹ / ₆₄ in.)	—

