




- Do not detach the inflator from the lifejacket.
- Before commencing the rearming procedure ensure you have the correct re-arming kit with the correct size CO² cylinder and that the lifejacket is dry.
- Keep away from fluids.
- Ensure the automatic cartridge in the re-arming kit is within its Replace By Date

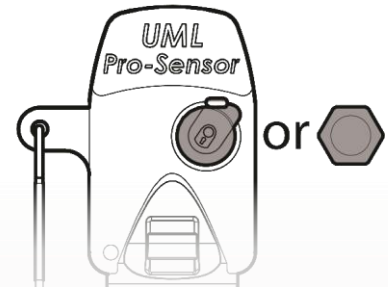

The instructions below are for both types of inflator as shown above.


Step 1

Unscrew the automatic cartridge by turning it anti-clockwise and discard it in an environmentally friendly manner. Replace it with the new cartridge which will have a black cap, by turning it clockwise. Tighten up hand tight.



Step 2

Remove the pierced CO² cylinder by turning it anti-clockwise and discard it in an environmentally friendly manner.

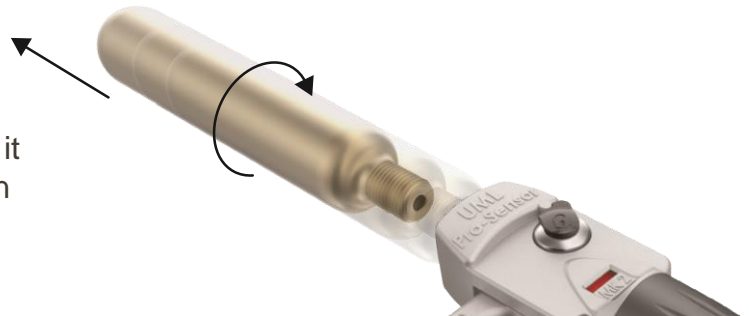


Step 3

If the unit has been manually activated, push the lever back into its slot until it clicks into position.




Step 4

Ensure the black CO² cylinder seal is fitted correctly.

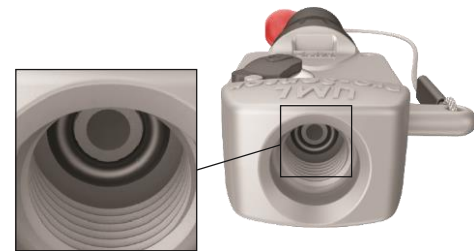

Step 5

Ensure the CO² Cylinder cap has not been pierced and then screw it clockwise into the UML ProSensor inflator. Tighten up, hand tight. If the inflator has been assembled correctly, both indicator panels will be green.

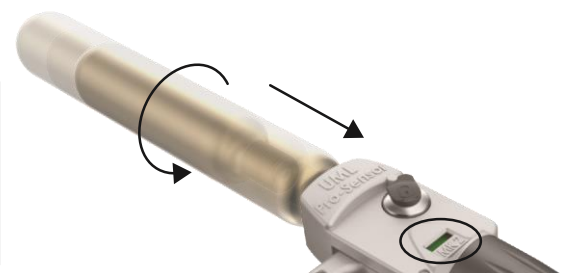

- Re-pack the lifejacket according to the lifejacket manufacturer's instructions.
- When not in use, store the lifejacket in a cool, dry place out of direct sunlight.